

I'm not a bot



Ge profile dishwasher instruction manual

ge.comSafety Instructions 2,s OperatingInstructions Care and Cleaning..... 12Control Panel and Settings ... 4-6Loading Place Settings 11 Loading the Racks 10 Optional Accessories..... 11Using the Dishwasher 6-9 TroubleshootingTips .. 13, 14 Consumer SupportConsumer Support Back CoverWarrants 15
GSD6900Series PDW7000Series zC) Write the model and serialnumbers here:Model # Serial #You can find them on the tub wall just inside the doon165D4700P336 49-5501606-06 JR Troubleshooting Tips 16 Troubleshooting Tips 18 Save time, money, and paper! Download a digital copy of your owner's manual, use and care manual, installation information, and energy guides. Printing tip! If printing is required, note that some manuals include multiple languages. You can save paper and ink by printing only the pages for the language you need. Enter your appliance's model number to download owner's manuals, use and care manuals, installation information and energy guides. Enter Your Model Number: Model # Serial # You can find them on a label on the tub wall just inside the door. GE is a trademark of the General Electric Company. Manufactured under trademark license. 49-4000214 Rev 0 08-19 GEA... Page 2 THANK YOU FOR MAKING GE APPLIANCES A PART OF YOUR HOME. Whether you grew up with GE Appliances, or this is your first, we're happy to have you in the family. We take pride in the craftsmanship, innovation and design that goes into every GE Appliances product, and we think you will too. Page 3 Notes 49-4000214 Rev 0... IMPORTANT SAFETY INFORMATION READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE WARNING For your safety, the information in this manual must be followed to minimize the risk of fire, explosion, electric shock, and to prevent property damage, personal injury, or death. PROPER INSTALLATION AND MAINTENANCE WARNING This dishwasher must be properly installed and located in accordance with the Installation Instructions before... Page 5 Automatic Dishwashing Detergent, ® switch on before touching Start to allow the control and Finish Jet-Dry Rinse Aid rinse agents ® ® to initialize, have been approved for use in all GE Appliances dishwashers. READ AND SAVE THESE INSTRUCTIONS 49-4000214 Rev 0... Getting started Features and appearance will vary throughout this manual GDF565 GDF645 GDT565 DDT700 GDT665, GDT645, GDP645 PDT715, PDP715 PDT775, PDT785 Load Dishwasher For best dishwashing results, follow the loading guidelines found in the Loading section. No pre-rinsing of normal food soil is required. Scrape off hard soils, including bones, toothpicks, skins, and seeds. Remove leafy vegetables, meat trimmings, and excessive amounts of grease or oil. Page 7 Getting started Select Cycle Press the furthest pad on the left for the desired wash cycle. On some models, the light next to the furthest pad on the left will be lit to indicate which wash cycle has been selected. On other models, pressing the furthest pad on the left will show various cycles in the display window. Page 8 Getting started Select Options The light by the selected button will be lit to indicate which Option has been selected. Normal This option is for normally soiled dishes, optimizes wash performance while conserving energy. Temp Boost This option increases the temperature to help clean heavily soiled dishes and will increase the cycle time by 20 to 50 minutes. Page 9 Getting started Start Dishwasher Start Press the Start pad and close the door within 4 seconds to start the cycle or begin the Delay Hours countdown. The wash cycle will begin shortly after closing the door. The display will turn off if the door remains open for two minutes. Dispensers Check the Water Temperature The entering water should be at least 120°F (49°C) and Turn on the hot water faucet nearest the dishwasher, not more than 150°F (66°C) for effective cleaning and to place the thermometer in a glass and let the water run prevent dish damage. Page 11 The cover will open during the wash cycle. Filling the Detergent Dispenser GE Appliances recommends using detergent in tablet or packet form. Independent testing has shown this form of detergent is very effective in the dishwasher. Finish ® ... Appliance Communication WiFi Connect (on some models) (for customers in the United States) Your dishwasher is GE Appliances WiFi Connect Please visit www.GEAppliances.com/connect to capable. A WiFi communication card is built into the connect your appliance, learn more about connected... Loading For best dishwashing results, follow these loading guidelines. Features and appearance of racks and silverware baskets may vary from your model. Upper Rack The upper rack is primarily for glasses, cups, and IMPORTANT: Ensure that items do not protrude through saucers. Page 14 Loading Rail On some models, the upper rack may be adjusted to accommodate larger items. To adjust the upper rack, fully Hook extend the upper rack and lift the front of the rack so that Upper the rack roller wheels clear the end hooks on the front of Rack the rails. Page 15 Loading 12 Place Settings - Upper Rack Models - GDF645, GDP645, GDT645, GDF565, Models - DDT700, GDT665, PDP715, PDT715 GDT565, PDT775 Models - PDT785 49-4000214 Rev 0... Page 16 Loading For best dishwashing results, follow these loading guidelines. Features and appearance of racks and silverware baskets may vary from your model. Lower Rack The lower rack is best used for plates, saucers and The clips can be a choke hazard WARNING cookware items. Page 17 Loading 8 Place Settings - Lower Rack Models - GDF565, GDT565, GDF645, GDP645, Models - DDT700, GDT665, PDP715, PDT715, PDT775, GDT645 PDT785 10 Place Settings - Lower Rack Models - GDF565, GDT565, GDF645, GDP645, Models - DDT700, GDT665, PDP715, PDT715, PDT775, GDT645 PDT785 12 Place Settings - Lower Rack... Page 18 Take care when loading, unloading, CAUTION The tray is only meant to be used with a GE Appliances or transporting the silverware or 3rd rack dishwasher to hold silverware, cooking utensil tray. The tray may contain sharp or heavy utensils, and other small items. Page 19 Loading Silverware/flatware is loaded using the silverware basket lids. This ensures great wash performance of the silverware. Loading in this manner prevents nesting and makes sure all items are washed uniformly. Silverware Basket Place flatware in the removable silverware baskets. Sharp objects, such as forks and knives, may be placed with the handles facing up, in order to protect your hands. Dishwasher Cleaner will break up mineral ® deposits, and remove hard water film and stains. You can order citric acid GE Appliances kit #WD33X151 through GE Appliances Parts by calling 877-959-8688 or visiting GEApplianceparts.com. In Canada, call 1-800-661-1616. You can purchase Finish Dishwasher ®... Page 21 Rinse filter with warm soapy water. Scrubbing with scouring pads or brushes can dama ge Scouring pads or brushes can scratch the filter surface the filter. Once cleaned, replace the Ultra-Fine Filter, and but a soft brush or sponge may be needed to remove stubborn soils or calcium deposits caused by hard water. Troubleshooting Tips... Before you call for service Problem Possible Cause What To Do Start status indicator The door was opened or the Press the Start pad once and close the door within 4 light flashing cycle was interrupted. seconds to start the dishwasher. Press the Start pad a second time when the dishwasher is running only if you wish to cancel the cycle. Page 23 Quantum Automatic Dishwashing Detergent ® ® has been approved for use in all GE Appliances dishwashers. To remove suds from the tub, open the dishwasher and let suds dissipate. Open the door, press and hold Start for 3 seconds, and close the door. Page 24 Troubleshooting Tips... Before you call for service Problem Possible Cause What To Do Water standing in the Air gap is clogged Clean the air gap. See the Care and Cleaning section. bottom of the tub High drain loop or air gap not Refer to the Installation Instructions for proper drain line installed installation. This limited warranty is extended to the original purchaser and any succeeding owner for products purchased for home use within the USA. If the product is located in an area where service by a GE Appliances Authorized Servicior is not available, you may be responsible for a trip charge or you may be required to bring the product to an Authorized GE Appliances Service location for service. Have a question or need assistance with your appliance? Try the GE Appliances Website 24 hours a day, any day of the year! You can also shop for more great GE Appliances products and take advantage of all our on-line support GEAppliances.com... Page 2IMPORTANT SAFETY INFORMATION READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE WARNING For your safety, the information in this manual must be followed to minimize the risk of fire, explosion, electric shock, and to prevent property damage, personal injury, or death. PROPER INSTALLATION AND MAINTENANCE WARNING This dishwasher must be properly installed and located in accordance with the Installation Instructions before it is used. If you did not receive an Installation Instructions sheet with your dishwasher, you can receive one by visiting our Website at GEAppliances.com. In Canada, visit www.GEAppliances.ca. Connect the dishwasher/appliance to a grounded metal, permanent wiring system; or run an equipment-grounding conductor with the circuit conductors and connect to the equipment-grounding terminal or lead of the appliance. Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service representative if you are in doubt whether the appliance is properly grounded. Dispose of discarded appliances and shipping or packing material properly. WARNING WHEN USING YOUR DISHWASHER, FOLLOW BASIC PRECAUTIONS, INCLUDING THE FOLLOWING: Use this appliance only for its intended purpose as described in this Owner's Manual. Use only detergents or wetting agents recommended for use in a dishwasher and keep them out of reach of children. Using a detergent that is not specifically designed for dishwashers will cause the dishwasher to fill with suds. Locate sharp items so that they are not likely to damage the door seal. Load sharp knives with the handles up to reduce the risk of cut-type injuries. Do not wash plastic items unless marked dishwasher safe or the equivalent. For plastic items not so marked, check the manufacturer's recommendations. Do not touch the heating element during or immediately after use. READ AND SAVE THESE INSTRUCTIONS 4 Do not attempt to repair or replace any part of your dishwasher unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician. Use only cord kit WX09X70910 or hard-wire to building electrical. Failure to follow this instruction, could result in risk of fire and personal injury. To minimize the possibility of electric shock, disconnect this appliance from the power supply before attempting any maintenance. NOTE: Turning the dishwasher off does not disconnect the appliance from the power supply. We recommend having a qualified technician service your appliance. Do not operate your dishwasher unless all enclosure panels are properly in place. Do not tamper with controls. Do not abuse, sit on or stand on the door or dish rack of the dishwasher. To reduce the risk of injury, do not allow children to play with, on or inside this appliance at any time. Do not store or use combustible materials including gasoline or other flammable liquids or vapors in the vicinity of this or any other appliance. Small parts, such as rack clips and filter retaining posts, can be a choke hazard to small children if removed from the dishwasher. Keep out of reach of small children. Detailed grounding instructions can be found in the "PREPARE ELECTRICAL WIRING" section of the installation Instructions. 49-4000214 Rev 0