

[Click to verify](#)



Honeywell th8320r1003 visionpro thermostat manual

Nous vous félicitons de votre achat d'un thermostat programmable à écran tactile Honeywell. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Select fan mode.SYSTEM. It shows that the thermostat is in Emergency Heat mode. • If thermostat is not in Emergency Heat mode, an alert is active. Touch to display options. 1985 Douglas Drive North Golden Valley, MN 55422 © U.S. Registered Trademark, © 2016 Honeywell International Inc.692761EFS05 M.S. Rev. When used with the optional RedLINK Internet Gateway, you can remotely monitor and control the heating and cooling system in your home or business—you can stay connected to your comfort system wherever you go.Honeywell's Total Connect Comfort is the perfect solution if you travel frequently, own a vacation home, a business or manage an investment property or if you are simply looking for peace of mind.Page 369-2761EFS—03 1Quick reference 2Setting the time/date 3Setting the fan 4Preset energy-saving schedules 5Schedule overrides 6Viewing equipment status 7Setting vacation, holiday, and events Shows system mode (heat/cool), outdoor temperature and humidity (with optional outdoor sensor).Override. 21 Page 469-2761EFS—03 2HOME. Temperature returns to an energy-saving level after the timer expires, or the "Occupied" period ends.NOTE: This feature is available only when programmed by the installer.Press HERE toStart OccupancyDuring Occupied program periods, an occupancy sensor directs the thermostat to go to REMOTE SETBACK settings when the room is empty. Flashes for battery-only power; on continuous if system powered.Micro SD Card port. En utilisant la passerelle Internet RedLINK en option, vous pouvez surveiller et contrôler à distance le système de chauffage et de refroidissement de votre domicile ou de votre entreprise — vous pouvez rester connecté à votre système de confort où que vous soyez.Le système Total Connect Comfort d'Honeywell est la solution parfaite si vous voyagez fréquemment, possédez une maison de vacances ou une entreprise ou gérez un immeuble de placement, ou si tout simplement vous recherchez la tranquillité d'esprit. Touch to set the current time/date. The thermostat displays "In Recovery" when it turns the system on early.Dehumidification Away Mode—Your system can be set to control indoor climate while your home is vacant during the humid season. HONEYWELL SHALL NOT BE LIABLE FOR ANY LOSS OR DAMAGE OF ANY KIND, INCLUDING ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING, DIRECTLY OR INDIRECTLY, FROM ANY BREACH OF ANY WARRANTY, EXPRESS OR IMPLIED, OR ANY OTHER FAILURE OF THIS PRODUCT. During this "off" time, the message "Wait" is displayed on screen.Pre-occupancy Purge (commercial use only)—This feature turns on the fan 1 to 3 hours before each "occupied" time period, to provide a comfortable work environment when you arrive.Page 18Page 19Page 20Page 21 19 69-2761EFS—03Portable Comfort ControlIf you have only one thermostat, you move this remote control from room to room (like a portable thermostat), to make sure the temperature is comfortable in the room you're using. If at any time during the warranty period the product is determined to be defective or malfunctions, Honeywell shall repair or replace it (at Honeywell's option).If the product is defective, (i) return it, with a bill of sale or other dated proof of purchase, to the place from which you purchased it; or (ii) call Honeywell Customer Care at 18004681502. Depending on how your thermostat was installed, the screen light may always be on.Page 52 Touch Time or Date, then touch Select.3 Touch s or t until the proper time4 Touch Done to save or Cancel to ignore MCR34092MCR34155Select Option Time DateMCR34094Please Set Time6 :30 PM2 Touch On, Auto, Circ, or Follow Schedule.4-6).MCR34096MCR34097 Page 669-2761EFS—03 41 Touch SYSTEM to display system settings.2 Touch desired option:Heat: Controls only the heating system.Cool: Controls only the cooling system.Off: Heating/cooling systems are off.Auto: Selects heating or cooling depending on the indoor temperature.Em Heat (heat pumps with aux. For increased ventilation, select 20, 40, or 60 minutes.Page 2269-2761EFS—03 20Screen is blank • Check circuit breaker and reset if necessary. • Make sure power switch at heating and cooling system is on. • Make sure furnace door is closed securely. • If thermostat is battery powered, make sure fresh AA alkaline batteries are installed correctly (see page 16).Screen is difficult to read• Change screen brightness using Preferences menu (see page 13).Red light is on • If thermostat is in Emergency Heat mode, the red light is normal. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.This warranty gives you specific legal rights, and you may have other rights which vary from state to state.If you have any questions concerning this warranty, please write Honeywell Customer Care, 1985 Douglas Dr, Golden Valley, MN 55422 or call 18004681502.When the product is registered on-line at www.warranty. Make sure the temperature is set higher than the Inside temperature. • Touch SYSTEM to set system to Cool. This delay allows the room to stay comfortable if the room is unoccupied for only a short time.Page 131 Touch MENU and select Humidification.3 Touch s or t to select humidity level.MCR34128MCR34129MCR3411001 Touch MENU and select Dehumidification.3 Touch s or t to select humidity level.MCR34130MCR34131MCR341100 Page 1469-2761EFS—03 121 Touch MENU and select Dehumidification.3 Touch s or t to select humidity level.DehumidificationEquipment StatusDehumidificationOff Auto1 Touch MENU, and select Ventilation.2 Select Mode, Temporary Boost, or Lockout. VentilationEquipment StatusModeTemporary Boost Page 15Temporary Boost: Touch s or t to select how Lockout: Touch s or t to select Yes or MCR34135Ventilation ModeOff Auto OnMCR34136Run Ventilation For 60 minutesMCR34137Lockout in Sleep Period: NoMCR34170MCR34139MCR341100 Page 1669-2761EFS—03 14Clean ScreenSecurity SettingsClean screenfor 30 seconds?1 Touch MENU and select Security SettingsSecurity SettingsDealer InformationChange Lock ModeCreate PasswordLock ModeUnlocked Page 17 15 69-2761EFS—03Check dealer information If you need to contact your installer for maintenance, repairs, or upgrades. 1 Touch MENU.2 Select Dealer Information.3 Scroll through the displayed information.4 Touch Done to return to the menu.ABC HEATING & AIR555-555-5555Dealer InformationInstaller OptionsAdaptive Intelligent Recovery (residential use only)—Over time, the VisionPRO® thermostat "learns" how long it takes your system to reach the temperature you want. However, there is no guarantee that interference will not occur in a particular installation. On when alert message is active or system is set to EmHeat. With multiple sensors, the thermostat can average temperature readings from each, to optimize comfort throughout your home.RedLINK™ Internet GatewayThe Honeywell RedLINK Internet Gateway gives you remote access to your VisionPRO® thermostat from the web, smart phone or tablet. The Gateway can also send alerts to as many as 6 email addresses to notify you if a problem occurs.Wireless Entry/Exit RemoteThis device mounts beside your door for one-touch control. Use card to load holiday schedules and custom events.The screen lights when you press any button. Touch an arrow to change temperature setting and select a Temporary or Permanent Hold.Indoor conditions. To change pre-set temperatures, go to MENU > Entry/Exit Remote.Wireless Vent and Filter Boost RemoteThis device mounts anywhere in your home (typically bathroom or kitchen) for convenient, on-demand ventilation. Touch to set current time/date. Wait 5 minutes for the system to restart safely, without damaging the compressor. Make sure the temperature is set lower than the Inside temperature. • Check circuit breaker and reset if necessary. • Make sure power switch at heating & cooling system is on. • Make sure furnace door is closed securely. • If "Wait" is displayed, the compressor protection timer is on. Touch to override program schedule.Current schedule. This warranty shall not apply if it is shown by Honeywell that the defect or malfunction was caused by damage which occurred while the product was in the possession of a consumer. Honeywell's sole responsibility shall be to repair or replace the product within the terms stated above. Check message on the thermostat screen.Heating or cooling system does not respond• Touch SYSTEM to set system to Heat. If you have multiple thermostats, you can view and adjust the temperature in each room from your armchair.Wireless Outdoor SensorWith a wireless outdoor sensor, your VisionPRO® thermostat can display outside temperature and humidity. Press AWAY to control to an energy saving temperature when you leave home. Touch an arrow to change temperature setting and set a temporary hold.Current program status.Indoor conditions. The thermostat ignores the occupancy sensor during Unoccupied program periods.If the thermostat is set up to be non-programmable, the sensor directs the thermostat to go to REMOTE SETBACK settings when the room is empty. heat): Controls auxiliary/emergency heat. Temperature and humidity will be kept at levels that protect your home and possessions. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device must not be co-located or operating in conjunction with any other antenna or transmitter.Section 7.1.2 of RSS-GENUnder Industry Canada regulations, this radio transmitter may only operate using an antenna of type and maximum (or lesser) gain approved for the transmitter by Industry Canada. Alert Light. Shows indoor temperature and humidity.Current time. Start here to set a program schedule.Current status. Page 2With your new thermostat, you can: • Connect to the internet to monitor and control your heating/cooling system and receive alerts by email (requires optional RedLINK Internet Gateway)• View outdoor temperature and humidity (requires optional Wireless Outdoor Sensor)• Control humidification, dehumidification or ventilation (TH8321 model)Your new thermostat also provides: • Adaptive Intelligent Recovery—over time, the VisionPRO thermostat "learns" how long it takes your system to reach the temperature you want. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IS HEREBY LIMITED TO THE THREEYEAR DURATION OF THIS WARRANTY. This user guide contains all the information you need to configure the touch-screen programmable thermostat with RedLINK (TH8320R1003) at the first start-up and further work. It turns on the heating or cooling system earlier to make sure you're comfortable at the time you expect. Description Automatic regulation of the room temperature and energy savings are the main tasks of the Honeywell TH8320R VisionPro 8000 Series. 14Security settings 14Viewing dealer information 15Advanced features 15Installer options 16Replacing batteries 16You can view or adjust indoor temperature, system mode and other settings. Flashes for battery-only power; on continuous if system powered.The screen lights when you press any button. Operation is subject to the following two conditions:1 This device may not cause harmful interference, and2 This device must accept any interference received, including interference that may cause undesired operation.FCC Warning (Part 15.21) (USA only)Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.FCC Interference Statement (Part 15.105 (b)) (USA only)This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. 0716Printed in U.S.A.For assistance please visit , or call toll-free: 1-800-468-1502 (residential installation) • 1-888-245-1051 (commercial installation)TM69-2761EFS-05 Page 25Page 26Avec votre nouveau thermostat, vous pouvez : • Vous connecter sur Internet pour surveiller et contrôler votre système de chauffage/refroidissement et recevoir des alertes par courriel (nécessite la passerelle Internet RedLINK en option) • Consulter la température et l'humidité extérieures (nécessite le capteur extérieur sans fil en option) • Contrôler l'humidification, la déshumidification ou la ventilation (modèle TH8321)Votre nouveau thermostat offre aussi les fonctions suivantes : • Système de récupération intelligent adaptéAvec le temps, le thermostat VisionPRO « apprend » à reconnaître le temps requis par le système à obtenir la température désirée. Depending on how your thermostat was installed, the screen light may always be on.HOME. 16Temperature and humidity display 18Optional accessories 19Troubleshooting 20Regulatory information Touch to display Home screen.FAN. If someone is in the room, it uses the Occupied program period settings. Select system mode (Heat/Cool).MENU. It turns on the heating or cooling system earlier to make sure you're comfortable at the time you expect. • Dealer information on the screen—making it easy for you to contact your dealer for service. • Vacation and holiday scheduling—allowing you to program a setback temperature to save energy while you are away. • Keypad lockout to prevent unauthorized changes. • Equipment status—provides on/off status of you. THIS WARRANTY IS THE ONLY EXPRESS WARRANTY HONEYWELL MAKES ON THIS PRODUCT. Before you leave, touch MENU, then select Dehum Away Mode. 7Setting holiday/event schedules: commercial use 8Setting humidification and dehumidification 11Setting ventilation 12Setting preferences 13Cleaning the thermostat screen To customize settings, see next page.Wake 6:00 am 70° 78° 70° 78°Leave 8:00 am 62° 85° 62° 85°Return 6:00 pm 70° 78° 70° 78°Sleep 10:00 pm 62° 82° 62° 82°Cool (Mon-Fri)Start timeHeat (Mon-Fri)Period Heat (Sat-Sun)Cool (Sat-Sun)Residential UseOccupied 1 8:00 am 70° 75° OnUnoccupied 1 10:00 pm 55° 85° AutoOccupied 2* 12:00 am 70° 75° OnUnoccupied 2* 12:00 am 55° 85° AutoCoolStart time HeatPeriod FanCommercial Use* Period 2 is cancelled by default. When you return, touch Cancel to resume normal operation.Compressor Protection—The thermostat keeps the compressor off for a few minutes before restarting, to prevent equipment damage. Shows system mode (heat/cool), outdoor temperature and humidity (with optional outdoor sensor).Current schedule. Honeywell.com, the standard manufacture coverage stated above extends to a period of (5) years.Page 23FCC Compliance Statement (Part 15.19) (USA only)This device complies with Part 15 of the FCC Rules. Honeywell warrants this product, excluding battery, to be free from defects in the workmanship or materials, under normal use and service, for a period of three (3) years from the date of purchase by the consumer. This information can also be displayed on your handheld Portable Comfort Control.Wireless Indoor SensorIf an indoor sensor is installed, your VisionPRO thermostat will respond to temperature and humidity readings at the sensor location—providing comfort where the sensor is located. When you arrive, touch the message to maintain a comfortable temperature while the room is occupied.Touch the s or t buttons to set the temperature or the Hold Until time. If you activate it, the values shown above are default settings.Page 72 Select Edit Schedule to display Use MCR34100MCR34101MGR341024 Touch s or t to set your Wake time for 5 Touch s or t to set Heat and Cool 6 Touch other time periods (Leave, Return. NOTE: Touch Cancel Period to eliminate NOTE: Touch Fan Setting to customize fan switching to REMOTE SETBACK settings. Compressor is locked out.3 Touch Done to save and exit.NOTE: The Auto and Em Heat system settings may not appear, depending on how your thermostat was installed.Heat Cool AutoOffThis thermostat uses default Energy Saver settings that can reduce your heating/cooling expenses. 12Setting preferences 13Cleaning the thermostat screen To customize settings, see next page.Wake 6:00 am 70° 78° 70° 78°Leave 8:00 am 62° 85° 62° 85°Return 6:00 pm 70° 78° 70° 78°Sleep 10:00 pm 62° 82° 62° 82°Cool (Mon-Fri)Start timeHeat (Mon-Fri)Period Heat (Sat-Sun)Cool (Sat-Sun)Residential UseOccupied 1 8:00 am 70° 75° OnUnoccupied 1 10:00 pm 55° 85° AutoOccupied 2* 12:00 am 70° 75° OnUnoccupied 2* 12:00 am 55° 85° AutoCoolStart time HeatPeriod FanCommercial Use* Period 2 is cancelled by default. When you return, touch Cancel to resume normal operation.Compressor Protection—The thermostat keeps the compressor off for a few minutes before restarting, to prevent equipment damage. Shows system mode (heat/cool), outdoor temperature and humidity (with optional outdoor sensor).Current schedule. Honeywell.com, the standard manufacture coverage stated above extends to a period of (5) years.Page 23FCC Compliance Statement (Part 15.19) (USA only)This device complies with Part 15 of the FCC Rules. Honeywell warrants this product, excluding battery, to be free from defects in the workmanship or materials, under normal use and service, for a period of three (3) years from the date of purchase by the consumer. This information can also be displayed on your handheld Portable Comfort Control.Wireless Indoor SensorIf an indoor sensor is installed, your VisionPRO thermostat will respond to temperature and humidity readings at the sensor location—providing comfort where the sensor is located. When you arrive, touch the message to maintain a comfortable temperature while the room is occupied.Touch the s or t buttons to set the temperature or the Hold Until time. If you activate it, the values shown above are default settings.Page 72 Select Edit Schedule to display Use MCR34100MCR34101MGR341024 Touch s or t to set your Wake time for 5 Touch s or t to set Heat and Cool 6 Touch other time periods (Leave, Return. NOTE: Touch Cancel Period to eliminate NOTE: Touch Fan Setting to customize fan switching to REMOTE SETBACK settings. Compressor is locked out.3 Touch Done to save and exit.NOTE: The Auto and Em Heat system settings may not appear, depending on how your thermostat was installed.Heat Cool AutoOffThis thermostat uses default Energy Saver settings that can reduce your heating/cooling expenses. 12Setting preferences 13Cleaning the thermostat screen To customize settings, see next page.Wake 6:00 am 70° 78° 70° 78°Leave 8:00 am 62° 85° 62° 85°Return 6:00 pm 70° 78° 70° 78°Sleep 10:00 pm 62° 82° 62° 82°Cool (Mon-Fri)Start timeHeat (Mon-Fri)Period Heat (Sat-Sun)Cool (Sat-Sun)Residential UseOccupied 1 8:00 am 70° 75° OnUnoccupied 1 10:00 pm 55° 85° AutoOccupied 2* 12:00 am 70° 75° OnUnoccupied 2* 12:00 am 55° 85° AutoCoolStart time HeatPeriod FanCommercial Use* Period 2 is cancelled by default. When you return, touch Cancel to resume normal operation.Compressor Protection—The thermostat keeps the compressor off for a few minutes before restarting, to prevent equipment damage. Shows system mode (heat/cool), outdoor temperature and humidity (with optional outdoor sensor).Current schedule. Honeywell.com, the standard manufacture coverage stated above extends to a period of (5) years.Page 23FCC Compliance Statement (Part 15.19) (USA only)This device complies with Part 15 of the FCC Rules. Honeywell warrants this product, excluding battery, to be free from defects in the workmanship or materials, under normal use and service, for a period of three (3) years from the date of purchase by the consumer. This information can also be displayed on your handheld Portable Comfort Control.Wireless Indoor SensorIf an indoor sensor is installed, your VisionPRO thermostat will respond to temperature and humidity readings at the sensor location—providing comfort where the sensor is located. When you arrive, touch the message to maintain a comfortable temperature while the room is occupied.Touch the s or t buttons to set the temperature or the Hold Until time. If you activate it, the values shown above are default settings.Page 72 Select Edit Schedule to display Use MCR34100MCR34101MGR341024 Touch s or t to set your Wake time for 5 Touch s or t to set Heat and Cool 6 Touch other time periods (Leave, Return. NOTE: Touch Cancel Period to eliminate NOTE: Touch Fan Setting to customize fan switching to REMOTE SETBACK settings. Compressor is locked out.3 Touch Done to save and exit.NOTE: The Auto and Em Heat system settings may not appear, depending on how your thermostat was installed.Heat Cool AutoOffThis thermostat uses default Energy Saver settings that can reduce your heating/cooling expenses. 12Setting preferences 13Cleaning the thermostat screen To customize settings, see next page.Wake 6:00 am 70° 78° 70° 78°Leave 8:00 am 62° 85° 62° 85°Return 6:00 pm 70° 78° 70° 78°Sleep 10:00 pm 62° 82° 62° 82°Cool (Mon-Fri)Start timeHeat (Mon-Fri)Period Heat (Sat-Sun)Cool (Sat-Sun)Residential UseOccupied 1 8:00 am 70° 75° OnUnoccupied 1 10:00 pm 55° 85° AutoOccupied 2* 12:00 am 70° 75° OnUnoccupied 2* 12:00 am 55° 85° AutoCoolStart time HeatPeriod FanCommercial Use* Period 2 is cancelled by default. When you return, touch Cancel to resume normal operation.Compressor Protection—The thermostat keeps the compressor off for a few minutes before restarting, to prevent equipment damage. Shows system mode (heat/cool), outdoor temperature and humidity (with optional outdoor sensor).Current schedule. Honeywell.com, the standard manufacture coverage stated above extends to a period of (5) years.Page 23FCC Compliance Statement (Part 15.19) (USA only)This device complies with Part 15 of the FCC Rules. Honeywell warrants this product, excluding battery, to be free from defects in the workmanship or materials, under normal use and service, for a period of three (3) years from the date of purchase by the consumer. This information can also be displayed on your handheld Portable Comfort Control.Wireless Indoor SensorIf an indoor sensor is installed, your VisionPRO thermostat will respond to temperature and humidity readings at the sensor location—providing comfort where the sensor is located. When you arrive, touch the message to maintain a comfortable temperature while the room is occupied.Touch the s or t buttons to set the temperature or the Hold Until time. If you activate it, the values shown above are default settings.Page 72 Select Edit Schedule to display Use MCR34100MCR34101MGR341024 Touch s or t to set your Wake time for 5 Touch s or t to set Heat and Cool 6 Touch other time periods (Leave, Return. NOTE: Touch Cancel Period to eliminate NOTE: Touch Fan Setting to customize fan switching to REMOTE SETBACK settings. Compressor is locked out.3 Touch Done to save and exit.NOTE: The Auto and Em Heat system settings may not appear, depending on how your thermostat was installed.Heat Cool AutoOffThis thermostat uses default Energy Saver settings that can reduce your heating/cooling expenses. 12Setting preferences 13Cleaning the thermostat screen To customize settings, see next page.Wake 6:00 am 70° 78° 70° 78°Leave 8:00 am 62° 85° 62° 85°Return 6:00 pm 70° 78° 70° 78°Sleep 10:00 pm 62° 82° 62° 82°Cool (Mon-Fri)Start timeHeat (Mon-Fri)Period Heat (Sat-Sun)Cool (Sat-Sun)Residential UseOccupied 1 8:00 am 70° 75° OnUnoccupied 1 10:00 pm 55° 85° AutoOccupied 2* 12:00 am 70° 75° OnUnoccupied 2* 12:00 am 55° 85° AutoCoolStart time HeatPeriod FanCommercial Use* Period 2 is cancelled by default. When you return, touch Cancel to resume normal operation.Compressor Protection—The thermostat keeps the compressor off for a few minutes before restarting, to prevent equipment damage. Shows system mode (heat/cool), outdoor temperature and humidity (with optional outdoor sensor).Current schedule. Honeywell.com, the standard manufacture coverage stated above extends to a period of (5) years.Page 23FCC Compliance Statement (Part 15.19) (USA only)This device complies with Part 15 of the FCC Rules. Honeywell warrants this product, excluding battery, to be free from defects in the workmanship or materials, under normal use and service, for a period of three (3) years from the date of purchase by the consumer. This information can also be displayed on your handheld Portable Comfort Control.Wireless Indoor SensorIf an indoor sensor is installed, your VisionPRO thermostat will respond to temperature and humidity readings at the sensor location—providing comfort where the sensor is located. When you arrive, touch the message to maintain a comfortable temperature while the room is occupied.Touch the s or t buttons to set the temperature or the Hold Until time. If you activate it, the values shown above are default settings.Page 72 Select Edit Schedule to display Use MCR34100MCR34101MGR341024 Touch s or t to set your Wake time for 5 Touch s or t to set Heat and Cool 6 Touch other time periods (Leave, Return. NOTE: Touch Cancel Period to eliminate NOTE: Touch Fan Setting to customize fan switching to REMOTE SETBACK settings. Compressor is locked out.3 Touch Done to save and exit.NOTE: The Auto and Em Heat system settings may not appear, depending on how your thermostat was installed.Heat Cool AutoOffThis thermostat uses default Energy Saver settings that can reduce your heating/cooling expenses. 12Setting preferences 13Cleaning the thermostat screen To customize settings, see next page.Wake 6:00 am 70° 78° 70° 78°Leave 8:00 am 62° 85° 62° 85°Return 6:00 pm 70° 78° 70° 78°Sleep 10:00 pm 62° 82° 62° 82°Cool (Mon-Fri)Start timeHeat (Mon-Fri)Period Heat (Sat-Sun)Cool (Sat-Sun)Residential UseOccupied 1 8:00 am 70° 75° OnUnoccupied 1 10:00 pm 55° 85° AutoOccupied 2* 12:00 am 70° 75° OnUnoccupied 2* 12:00 am 55° 85° AutoCoolStart time HeatPeriod FanCommercial Use* Period 2 is cancelled by default. When you return, touch Cancel to resume normal operation.Compressor Protection—The thermostat keeps the compressor off for a few minutes before restarting, to prevent equipment damage. Shows system mode (heat/cool), outdoor temperature and humidity (with optional outdoor sensor).Current schedule. Honeywell.com, the standard manufacture coverage stated above extends to a period of (5) years.Page 23FCC Compliance Statement (Part 15.19) (USA only)This device complies with Part 15 of the FCC Rules. Honeywell warrants this product, excluding battery, to be free from defects in the workmanship or materials, under normal use and service, for a period of three (3) years from the date of purchase by the consumer. This information can also be displayed on your handheld Portable Comfort Control.Wireless Indoor SensorIf an indoor sensor is installed, your VisionPRO thermostat will respond to temperature and humidity readings at the sensor location—providing comfort where the sensor is located. When you arrive, touch the message to maintain a comfortable temperature while the room is occupied.Touch the s or t buttons to set the temperature or the Hold Until time. If you activate it, the values shown above are default settings.Page 72 Select Edit Schedule to display Use MCR34100MCR34101MGR341024 Touch s or t to set your Wake time for 5 Touch s or t to set Heat and Cool 6 Touch other time periods (Leave, Return. NOTE: Touch Cancel Period to eliminate NOTE: Touch Fan Setting to customize fan switching to REMOTE SETBACK settings. Compressor is locked out.3 Touch Done to save and exit.NOTE: The Auto and Em Heat system settings may not appear, depending on how your thermostat was installed.Heat Cool AutoOffThis thermostat uses default Energy Saver settings that can reduce your heating/cooling expenses. 12Setting preferences 13Cleaning the thermostat screen To customize settings, see next page.Wake 6:00 am 70° 78° 70° 78°Leave 8:00 am 62° 85° 62° 85°Return 6:00 pm 70° 78° 70° 78°Sleep 10:00 pm 62° 82° 62° 82°Cool (Mon-Fri)Start timeHeat (Mon-Fri)Period Heat (Sat-Sun)Cool (Sat-Sun)Residential UseOccupied 1 8:00 am 70° 75° OnUnoccupied 1 10:00 pm 55° 85° AutoOccupied 2* 12:00 am 70° 75° OnUnoccupied 2* 12:00 am 55° 85° AutoCoolStart time HeatPeriod FanCommercial Use* Period 2 is cancelled by default. When you return, touch Cancel to resume normal operation.Compressor Protection—The thermostat keeps the compressor off for a few minutes before restarting, to prevent equipment damage. Shows system mode (heat/cool), outdoor temperature and humidity (with optional outdoor sensor).Current schedule. Honeywell.com, the standard manufacture coverage stated above extends to a period of (5) years.Page 23FCC Compliance Statement (Part 15.19) (USA only)This device complies with Part 15 of the FCC Rules. Honeywell warrants this product, excluding battery, to be free from defects in the workmanship or materials, under normal use and service, for a period of three (3) years from the date of purchase by the consumer. This information can also be displayed on your handheld Portable Comfort Control.Wireless Indoor SensorIf an indoor sensor is installed, your VisionPRO thermostat will respond to temperature and humidity readings at the sensor location—providing comfort where the sensor is located. When you arrive, touch the message to maintain a comfortable temperature while the room is occupied.Touch the s or t buttons to set the temperature or the Hold Until time. If you activate it, the values shown above are default settings.Page 72 Select Edit Schedule to display Use MCR34100MCR34101MGR341024 Touch s or t to set your Wake time for 5 Touch s or t to set Heat and Cool 6 Touch other time periods (Leave, Return. NOTE: Touch Cancel Period to eliminate NOTE: Touch Fan Setting to customize fan switching to REMOTE SETBACK settings. Compressor is locked out.3 Touch Done to save and exit.NOTE: The Auto and Em Heat system settings may not appear, depending on how your thermostat was installed.Heat Cool AutoOffThis thermostat uses default Energy Saver settings that can reduce your heating/cooling expenses. 12Setting preferences 13Cleaning the thermostat screen To customize settings, see next page.Wake 6:00 am 70° 78° 70° 78°Leave 8:00 am 62° 85° 62° 85°Return 6:00 pm 70° 78° 70° 78°Sleep 10:00 pm 62° 82° 62° 82°Cool (Mon-Fri)Start timeHeat (Mon-Fri)Period Heat (Sat-Sun)Cool (Sat-Sun)Residential UseOccupied 1 8:00 am 70° 75° OnUnoccupied 1 10:00 pm 55° 85° AutoOccupied 2* 12:00 am 70° 75° OnUnoccupied 2* 12:00 am 55° 85° AutoCoolStart time HeatPeriod FanCommercial Use* Period 2 is cancelled by default. When you return, touch Cancel to resume normal operation.Compressor Protection—The thermostat keeps the compressor off for a few minutes before restarting, to prevent equipment damage. Shows system mode (heat/cool), outdoor temperature and humidity (with optional outdoor sensor).Current schedule. Honeywell.com, the standard manufacture coverage stated above extends to a period of (5) years.Page 23FCC Compliance Statement (Part 15.19) (USA only)This device complies with Part 15 of the FCC Rules. Honeywell warrants this product, excluding battery, to be free from defects in the workmanship or materials, under normal use and service, for a period of three (3) years from the date of purchase by the consumer. This information can also be displayed on your handheld Portable Comfort Control.Wireless Indoor SensorIf an indoor sensor is installed, your VisionPRO thermostat will respond to temperature and humidity readings at the sensor location—providing comfort where the sensor is located. When you arrive, touch the message to maintain a comfortable temperature while the room is occupied.Touch the s or t buttons to set the temperature or the Hold Until time. If you activate it, the values shown above are default settings.Page 72 Select Edit Schedule to display Use MCR34100MCR34101MGR341024 Touch s or t to set your Wake time for 5 Touch s or t to set Heat and Cool 6 Touch other time periods (Leave, Return. NOTE: Touch Cancel Period to eliminate NOTE: Touch Fan Setting to customize fan switching to REMOTE SETBACK settings. Compressor is locked out.3 Touch Done to save and exit.NOTE: The Auto and Em Heat system settings may not appear, depending on how your thermostat was installed.Heat Cool AutoOffThis thermostat uses default Energy Saver settings that can reduce your heating/cooling expenses. 12Setting preferences 13Cleaning the thermostat screen To customize settings, see next page.Wake 6:00 am 70° 78° 70° 78°Leave 8:00 am 62° 85° 62° 85°Return 6:00 pm 70° 78° 70° 78°Sleep 10:00 pm 62° 82° 62° 82°Cool (Mon-Fri)Start timeHeat (Mon-Fri)Period Heat (Sat-Sun)Cool (Sat-Sun)Residential UseOccupied 1 8:00 am 70° 75° OnUnoccupied 1 10:00 pm 55° 85° AutoOccupied 2* 12:00 am 70° 75° OnUnoccupied 2* 12:00 am 55° 85° AutoCoolStart time HeatPeriod FanCommercial Use* Period 2 is cancelled by default. When you return, touch Cancel to resume normal operation.Compressor Protection—The thermostat keeps the compressor off for a few minutes before restarting, to prevent equipment damage. Shows system mode (heat/cool), outdoor temperature and humidity (with optional outdoor sensor).Current schedule. Honeywell.com, the standard manufacture coverage stated above extends to a period of (5) years.Page 23FCC Compliance Statement (Part 15.19) (USA only)This device complies with Part 15 of the FCC Rules. Honeywell warrants this product, excluding battery, to be free from defects in the workmanship or materials, under normal use and service, for a period of three (3) years from the date of purchase by the consumer. This information can also be displayed on your handheld Portable Comfort Control.Wireless Indoor SensorIf an indoor sensor is installed, your VisionPRO thermostat will respond to temperature and humidity readings at the sensor location—providing comfort where the sensor is located. When you arrive, touch the message to maintain a comfortable temperature while the room is occupied.Touch the s or t buttons to set the temperature or the Hold Until time. If you activate it, the values shown above are default settings.Page 72 Select Edit Schedule to display Use MCR34100MCR34101MGR341024 Touch s or t to set your Wake time for 5 Touch s or t to set Heat and Cool 6 Touch other time periods (Leave, Return. NOTE: Touch Cancel Period to eliminate NOTE: Touch Fan Setting to customize fan switching to REMOTE SETBACK settings. Compressor is locked out.3 Touch Done to save and exit.NOTE: The Auto and Em Heat system settings may not appear, depending on how your thermostat was installed.Heat Cool AutoOffThis thermostat uses default Energy Saver settings that can reduce your heating/cooling expenses. 12Setting preferences 13Cleaning the thermostat screen To customize settings, see next page.Wake 6:00 am 70° 78° 70° 78°Leave 8:00 am 62° 85° 62° 85°Return 6:00 pm 70° 78° 70° 78°Sleep 10:00 pm 62° 82° 62° 82°Cool (Mon-Fri)Start timeHeat (Mon-Fri)Period Heat (Sat-Sun)Cool (Sat-Sun)Residential UseOccupied 1 8:00 am 70° 75° OnUnoccupied 1 10:00 pm 55° 85° AutoOccupied 2* 12:00 am 70° 75° OnUnoccupied 2* 12:00 am 55° 85° AutoCoolStart time HeatPeriod FanCommercial Use* Period 2 is cancelled by default. When you return, touch Cancel to resume normal operation.Compressor Protection—The thermostat keeps the compressor off for a few minutes before restarting, to prevent equipment damage. Shows system mode (heat/cool), outdoor temperature and humidity (with optional outdoor sensor).Current schedule. Honeywell.com, the standard manufacture coverage stated above extends to a period of (5) years.Page 23FCC Compliance Statement (Part 15.19) (USA only)This device complies with Part 15 of the FCC Rules. Honeywell warrants this product, excluding battery, to be free from defects in the workmanship or materials, under normal use and service, for a period of three (3) years from the date of purchase by the consumer. This information can also be displayed on your handheld Portable Comfort Control.Wireless Indoor SensorIf an indoor sensor is installed, your VisionPRO thermostat will respond to temperature and humidity readings at the sensor location—providing comfort where the sensor is located. When you arrive, touch the message to maintain a comfortable temperature while the room is occupied.Touch the s or t buttons to set the temperature or the Hold Until time. If you activate it, the values shown above are default settings.Page 72 Select Edit Schedule to display Use MCR34100MCR34101MGR341024 Touch s or t to set your Wake time for 5 Touch s or t to set Heat and Cool 6 Touch other time periods (Leave, Return. NOTE: Touch Cancel Period to eliminate NOTE: Touch Fan Setting to customize fan switching to REMOTE SETBACK settings. Compressor is locked out.3 Touch Done to save and exit.NOTE: The Auto and Em Heat system settings may not appear, depending on how your thermostat was installed.Heat Cool AutoOffThis thermostat uses default Energy Saver settings that can reduce your heating/cooling expenses. 12Setting preferences 13Cleaning the thermostat screen To customize settings, see next page.Wake 6:00 am 70° 78° 70° 78°Leave 8:00 am 62° 85° 62° 85°Return 6:00 pm 70° 78° 70° 78°Sleep 10:00 pm 62° 82° 62° 82°Cool (Mon-Fri)Start timeHeat (Mon-Fri)Period Heat (Sat-Sun)Cool (Sat-Sun)Residential UseOccupied 1 8:00 am 70° 75° OnUnoccupied 1 10:00 pm 55° 85° AutoOccupied 2* 12:00 am 70° 75° OnUnoccupied 2* 12:00 am 55° 85° AutoCoolStart time HeatPeriod FanCommercial Use* Period 2 is cancelled by default. When you return, touch Cancel to resume normal operation.Compressor Protection—The thermostat keeps the compressor off for a few minutes before restarting, to prevent equipment damage. Shows system mode (heat/cool), outdoor temperature and humidity (with optional outdoor sensor).Current schedule. Honeywell.com, the standard manufacture coverage stated above extends to a period of (5) years.Page 23FCC Compliance Statement (Part 15.19) (USA only)This device complies with Part 15 of the FCC Rules. Honeywell warrants this product, excluding battery, to be free from defects in the workmanship or materials, under normal use and service, for a period of three (3) years from the date of purchase by the consumer. This information can also be displayed on your handheld Portable Comfort Control.Wireless Indoor SensorIf an indoor sensor is installed, your VisionPRO thermostat will respond to temperature and humidity readings at the sensor location—providing comfort where the sensor is located. When you arrive, touch the message to maintain a comfortable temperature while the room is occupied.Touch the s or t buttons to set the temperature or the Hold Until time. If you activate it, the values shown above are default settings.Page 72 Select Edit Schedule to display Use MCR34100MCR34101MGR341024 Touch s or t to set your Wake time for 5 Touch s or t to set Heat and Cool 6 Touch other time periods (Leave, Return. NOTE: Touch Cancel Period to eliminate NOTE: Touch Fan Setting to customize fan switching to REMOTE SETBACK settings. Compressor is locked out.3 Touch Done to save and exit.NOTE: The Auto and Em Heat system settings may not appear, depending on how your thermostat was installed.Heat Cool AutoOffThis thermostat uses default Energy Saver settings that can reduce your heating/cooling expenses. 12Setting preferences 13Cleaning the thermostat screen To customize settings, see next page.Wake 6:00 am 70° 78° 70° 78°Leave 8:00 am 62° 85° 62° 85°Return 6:00 pm 70° 78° 70° 78°Sleep 10:00 pm 62° 82° 62° 82°Cool (Mon-Fri)Start timeHeat (Mon-Fri)Period Heat (Sat-Sun)Cool (Sat-Sun)Residential UseOccupied 1 8:00 am 70° 75° OnUnoccupied 1 10:00 pm 55° 85° AutoOccupied 2* 12:00 am 70° 75° OnUnoccupied 2* 12:00 am 55° 85° AutoCoolStart time HeatPeriod FanCommercial Use* Period 2 is cancelled by default. When you return, touch Cancel to resume normal operation.Compressor Protection—The thermostat keeps the compressor off for a few minutes before restarting, to prevent equipment damage. Shows system mode (heat/cool), outdoor temperature and humidity (with optional outdoor sensor).Current schedule. Honeywell.com, the standard manufacture coverage stated above extends to a period of (5) years.Page 23FCC Compliance Statement (Part 15.19) (USA only)This device complies with Part 15 of the FCC Rules. Honeywell warrants this product, excluding battery, to be free from defects in the workmanship or materials, under normal use and service, for a period of three (3) years from the date of purchase by the consumer. This information can also be displayed on your handheld Portable Comfort Control.Wireless Indoor SensorIf an indoor sensor is installed, your VisionPRO thermostat will respond to temperature and humidity readings at the sensor location—providing comfort where the sensor is located. When you arrive, touch the message to maintain a comfortable temperature while the room is occupied.Touch the s or t buttons to set the temperature or the Hold Until time. If you activate it, the values shown above are default settings.Page 72 Select Edit Schedule to display Use MCR34100MCR34101MGR341024 Touch s or t to set your Wake time for 5 Touch s or t to set Heat and Cool 6 Touch other time periods (Leave, Return. NOTE: Touch Cancel Period to eliminate NOTE: Touch Fan Setting to customize fan switching to REMOTE SETBACK settings. Compressor is locked out.3 Touch Done to save and exit.NOTE: The Auto and Em Heat system settings may not appear, depending on how your thermostat was installed.Heat Cool AutoOffThis thermostat uses default Energy Saver settings that can reduce your heating/cooling expenses. 12Setting preferences 13Cleaning the thermostat screen To customize settings, see next page.Wake 6:00 am 70° 78° 70° 78°Leave 8:00 am 62° 85° 62° 85°Return 6:00 pm 70° 78° 70° 78°Sleep 10:00 pm 62° 82° 62° 82°Cool (Mon-Fri)Start timeHeat (Mon-Fri)Period Heat (Sat-Sun)Cool (Sat-Sun)Residential UseOccupied 1 8:00 am 70° 75° OnUnoccupied 1 10:00 pm 55° 85° AutoOccupied 2* 12:00 am 70° 75° OnUnoccupied 2* 12:00 am 55° 85° AutoCoolStart time HeatPeriod FanCommercial Use* Period 2 is cancelled by default. When you return, touch Cancel to resume normal operation.Compressor Protection—The thermostat keeps the compressor off for a few minutes before restarting, to prevent equipment damage. Shows system mode (heat/cool), outdoor temperature and humidity (with optional outdoor sensor).Current schedule. Honeywell.com, the standard manufacture coverage stated above extends to a period of (5) years.Page 23FCC Compliance Statement (Part 15.19) (USA only)This device complies with Part 15 of the FCC Rules. Honeywell warrants this product, excluding battery, to be free from defects in the workmanship or materials, under normal use and service, for a period of three (3) years from the date of purchase by the consumer. This information can also be displayed on your handheld Portable Comfort Control.Wireless Indoor SensorIf an indoor sensor is installed, your VisionPRO thermostat will respond to temperature and humidity readings at the sensor location—providing comfort where the sensor is located. When you arrive, touch the message to maintain a comfortable temperature while the room is occupied.Touch the s or t buttons to set the temperature or the Hold Until time. If you activate it, the values shown above are default settings.Page 72 Select Edit Schedule to display Use MCR34100MCR34101MGR341024 Touch s or t to set your Wake time for 5 Touch s or t to set Heat and Cool 6 Touch other time periods (Leave, Return. NOTE: Touch Cancel Period to eliminate NOTE: Touch Fan Setting to customize fan switching to REMOTE SETBACK settings. Compressor is locked out.3 Touch Done to save and exit.NOTE: The Auto and Em Heat system settings may not appear, depending on how your thermostat was installed.Heat Cool AutoOffThis thermostat uses default Energy Saver settings that can reduce your heating/cooling expenses. 12Setting preferences 13Cleaning the thermostat screen To customize settings, see next page.Wake 6:00 am 70° 78° 70° 78°Leave 8:00 am 62° 85° 62° 85°Return 6:00 pm 70° 78° 70° 78°Sleep 10:00 pm 62° 82° 62° 82°Cool (Mon-Fri)Start timeHeat (Mon-Fri)Period Heat (Sat-Sun)Cool (Sat-Sun)Residential UseOccupied 1 8:00 am 70° 75° OnUnoccupied 1 10:00 pm 55° 85° AutoOccupied 2* 12:00 am 70° 75° OnUnoccupied 2* 12:00 am 55° 85° AutoCoolStart time HeatPeriod FanCommercial Use* Period 2 is cancelled by default. When you return, touch Cancel to resume normal operation.Compressor Protection—The thermostat keeps the compressor off for a few minutes before restarting, to prevent equipment damage. Shows system mode (heat/cool), outdoor temperature and humidity (with optional outdoor sensor).Current schedule. Honeywell.com, the standard manufacture coverage stated above extends to a period of (5) years.Page 23FCC Compliance Statement (Part 15.19) (USA only)This device complies with Part 15 of the FCC Rules. Honeywell warrants this product, excluding battery, to be free from defects in the workmanship or materials, under normal use and service, for a period of three (3) years from the date of purchase by the consumer. This information can also be displayed on your handheld Portable Comfort Control.Wireless Indoor SensorIf an indoor sensor is installed, your VisionPRO thermostat will respond to temperature and humidity readings at the sensor location—providing comfort where the sensor is located. When you arrive, touch the message to maintain a comfortable temperature while the room is occupied.Touch the s or t buttons to set the temperature or the Hold Until time. If you activate it, the values shown above are default settings.Page 72 Select Edit Schedule to display Use MCR34100MCR34101MGR341024 Touch s or t to set your Wake time for 5 Touch s or t to set Heat and Cool 6 Touch other time periods (Leave, Return. NOTE: Touch Cancel Period to eliminate NOTE: Touch Fan Setting to customize fan switching to REMOTE SETBACK settings. Compressor is locked out.3 Touch Done to save and exit.NOTE: The Auto and Em Heat system settings may not appear, depending on how your thermostat was installed.Heat Cool AutoOffThis thermostat uses default Energy Saver settings that can reduce your heating/cooling expenses. 12Setting preferences 13Cleaning the thermostat screen To customize settings, see next page.Wake 6:00 am 70° 78° 70° 78°Leave 8:00 am 62° 85° 62° 85°Return 6:00 pm 70° 78° 70° 78°Sleep 10:00 pm 62° 82° 62° 82°Cool (Mon-Fri)Start timeHeat (Mon-Fri)Period Heat (Sat-Sun)Cool (Sat-Sun)Residential UseOccupied 1 8:00 am 70° 75° OnUnoccupied 1 10:00 pm 55° 85° AutoOccupied 2* 12:00 am 70° 75° OnUnoccupied 2* 12:00 am 55° 85° AutoCoolStart time HeatPeriod FanCommercial Use* Period 2 is cancelled by default. When you return, touch Cancel to resume normal operation.Compressor Protection—The thermostat keeps the compressor off for a few minutes